

# IP TALKTWO INTERCOM MODULE

IP-TALKTWO/VOIP

- Full-duplex speech capability
- VoIP communications powered by PoE
- Web-based setup interface
- Integrated with the Tacera Nurse Call System
- Active call indicator

## TalkTwo/VoIP


A flush mounted intercom module that provides full-duplex audio communication between healthcare staff and patients in their room. It is integrated with the Tacera Nurse Call System to provide seamless communication to a specific location when an alarm is activated.

The intercom fits into a standard electrical wall box for quick and easy installation. Manufactured from an impact resistant polycarbonate / ABS plastic blend, the intercom features mounting hardware to maximize the life of the module.

## Two-way Audio Communication

Audio in the room offers many benefits for both hospital staff and patients. Nurses spend much of their time walking to and from patient rooms. Being able to respond to a patient alarm, know what the patient needs are and arrive at the room with the appropriate resources saves your staff valuable time. This time can be better spent providing care to the patient.

When a patient activates a callpoint, the nurse call system displays the alarm with the extension number of the room where the alarm was activated. By clicking on the extension number on either the nurse station or the mobile app, a voice call is connected to the room.

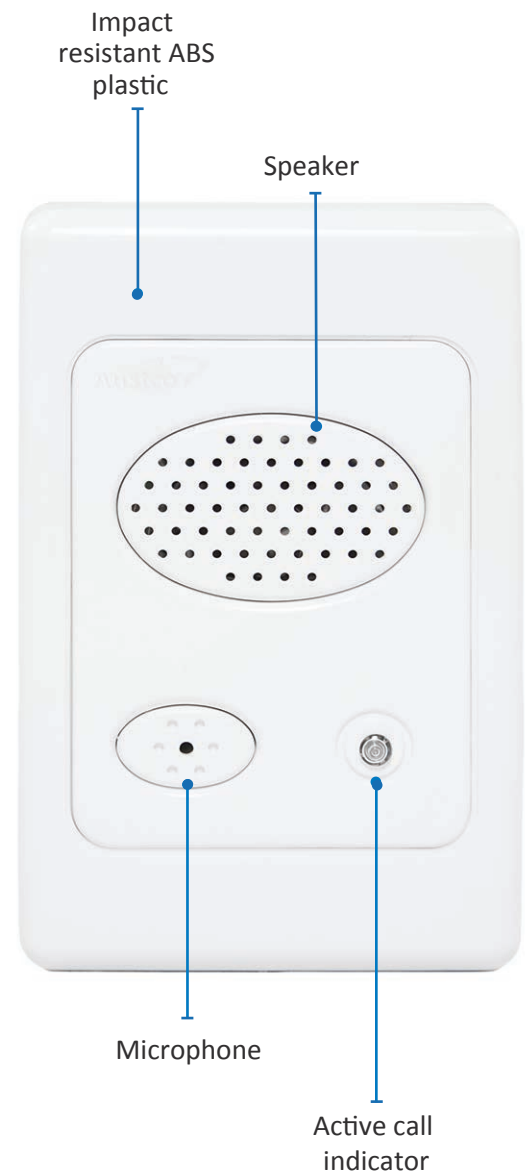

# SPECIFICATIONS

Feature	Description
Height	116 mm (4.57 in)
Width	76 mm (2.99 in)
Depth	45 mm (1.77 in)
Weight	5.29 oz
Mounting	Screw on
Plate	Austco Modular Plate
Wall Box Size	Standard Size Wall Box
Housing	Wall Box
Connectors	Modular 8P8 C
Cable	CAT6 STP cable
Temperature	0 - 50°C
Humidity Range	0-85% Non Condensing
Power	PoE (802.3af or later) power
Compliance	<ul style="list-style-type: none"><li>• AS 3811: Australian Standard, Hard-wired patient alarm systems</li><li>• AS/NZS 3811: New Zealand Standard, Hard-wired patient alarm systems</li><li>• CSA 22.2 No. 950-95: Safety of Information Technology Equipment, Including Electrical Business Equipment</li><li>• CE Mark (European Conformity)</li><li>• IEC 62368-1: Audio/video, information and communication technology equipment - Part 1: Safety requirements</li><li>• RCM (Regulatory Compliance Mark)</li></ul>

# ORDERING INFORMATION

Product Code	Description	Order Options
IP-TALKTWO/VoIP	IP TalkTwo VoIP Intercom	N/A
IP-TALKTWO/VoIP/BS	IP TalkTwo VoIP Intercom, British Style	N/A



© 2018 Austco Communications Systems PTY Ltd.  
All rights are reserved.

Austco Communications Systems PTY Ltd. reserves the right to take changes in specifications and/or discontinue any product at any time without notice or obligation and will not be liable for any consequences resulting from the use of this publication.